

Connection Wires

Model: AMF 11

1) The device cable interface diagram

12V
RS485A
RS485B
GND

12V
GND
Lock COM
Lock NC
Lock NO
Button
D-Sensor
Bell+
Bell-
ALARM1-

12V
GND
WG_OUT0
WG_OUT1

