

Connection Wires

Model: AMF 1D



Note: The fingerprint & card Access Control panel can connect our company fingerprint reader or normal wiegand RFID reader.

(1) If connect fingerprint reader: Dial switch A switch 1~8 to ON, and Dial switch B switch 1~8 to OFF



A



B

(2) If connect normal wiegand RFID reader: Dial switch A switch 1~8 to OFF, and Dial switch B switch 1~8 to ON



A



B

